



RCA Visys 25212 Handset Disassembly

This guide will provide the necessary steps to disassemble the handset in order to replace parts inside of the handset.

Written By: Sandy South



INTRODUCTION

In order to replace parts inside the handset, it must be properly disassembled.



TOOLS:


- [Flat Head Screw Driver](#) (1)
 - [Small Phillips Head Screwdriver](#) (1)
-

Step 1 — Handset Battery



- Place your thumb in the groove on the back of handset. Next, push down with your thumb and then slide the battery cover towards the bottom of the phone to remove the battery cover.

Step 2

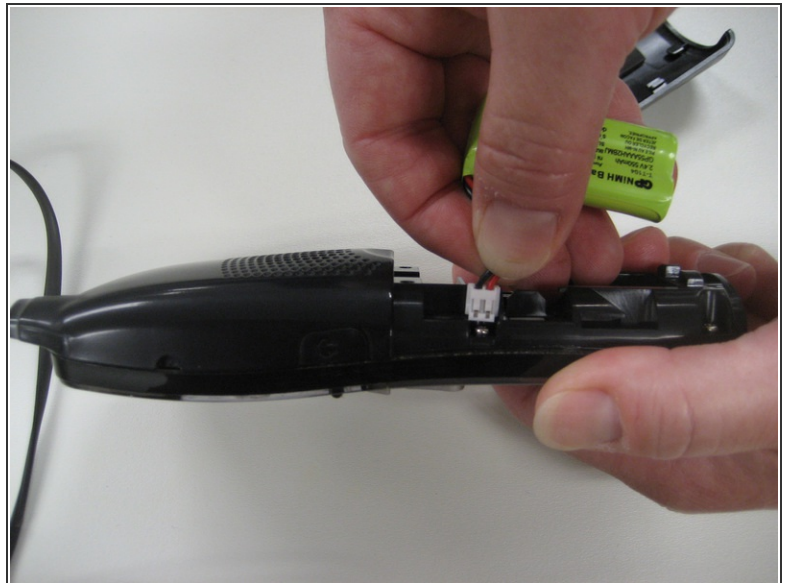


- To remove the battery, gently pull up on the white connector located on the left side of the phone.

Step 3 — Handset



- Remove the four screws, located at each of the corners within the back encasing, with a small Phillips head screwdriver.

Step 4

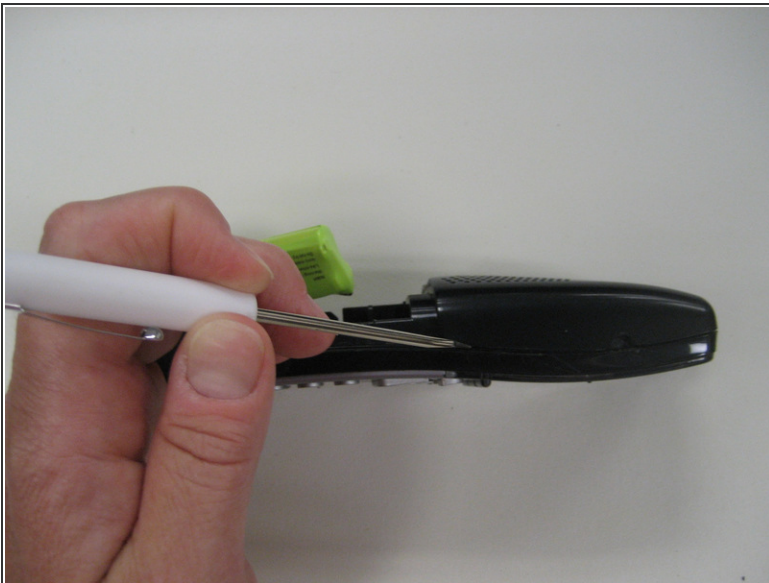


- Insert a small flathead screwdriver between the face plate and the back of the handset.
- Gently pry open the handset. You may need to insert the flathead screwdriver at multiple points in order to open the handset.

Step 5



- Using a small Phillips head screwdriver, remove the single screw (located at the top right) holding the circuit board in place.

Step 6

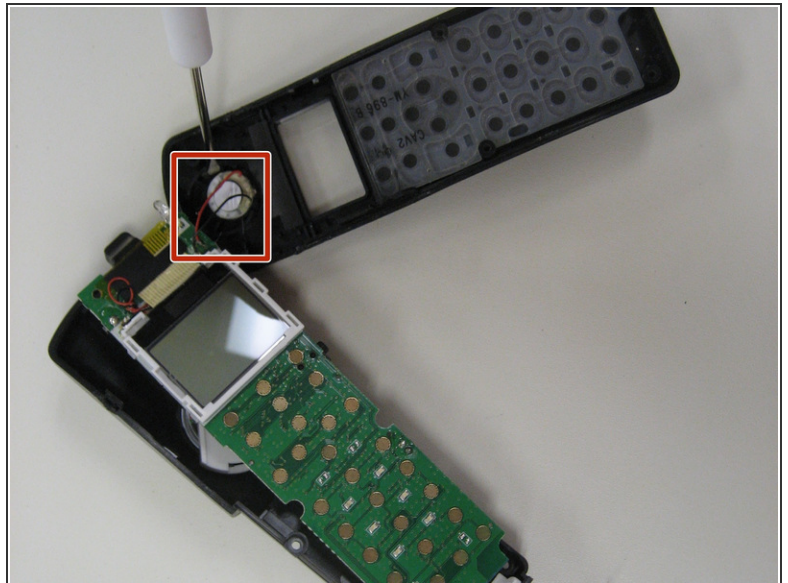

- Lift up the circuit board to expose the keypad.

⚠ Be careful not to disconnect the two wires that connect the speaker to the circuit board.

⚠ Also, notice the two wires located at the bottom when lifting the circuit board, as these are apart of the charger.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 07:47:31 PM.